

# AVR-X7200W(A) DTS:X UPDATE

Please note that we are very happy to announce that the **free of charge DTS:X update** for the AVR-X7200W and AVR-X7200WA is available for download.

This update introduces some changes to your system that we want you to be aware before you update the unit since it may affect daily usage.

The following features are added:

- DTS:X decoding
- DTS Neural:X upmixing to enjoy non DTS:X content (in PCM or DTS format) using the full DTS:X speaker configuration

With added DTS:X decoding and DTS Neural:X upmixing capability, following changes will happen to your receivers:

- DTS Neo:X will be replaced by DTS Neural:X
- Dolby Surround mode usage will be limited to PCM and Dolby content

You can also take a look in the modified user manuals for the products:

- [Web manual for AVR-X7200W with DTS:X](#)
- [Web manual for AVR-X7200WA with DTS:X](#)

# AVR-X7200W(A) DTS:X UPDATE


To update your unit, follow the below steps:

1. Press the SETUP button on the Remote Control
2. Select General > Firmware > Update
3. Select Update Now

**\*Note on Auro-3D upgraded units:**

If you have an Auro-3D upgraded unit, DTS:X firmware update won't effect this. However we will add more flexibility to the speaker setup and after the update you will be able to use the following speaker configuration to enjoy all 3D sound formats (Dolby Atmos, DTS:X and Auro-3D) by one speaker layout with 4 height speakers:

Front (FL/FR)  
Center (C)  
Surround (SL/SR)  
Front Height (FHL/FHR)  
Rear Height (RHL/RHR)  
Subwoofer (SW)

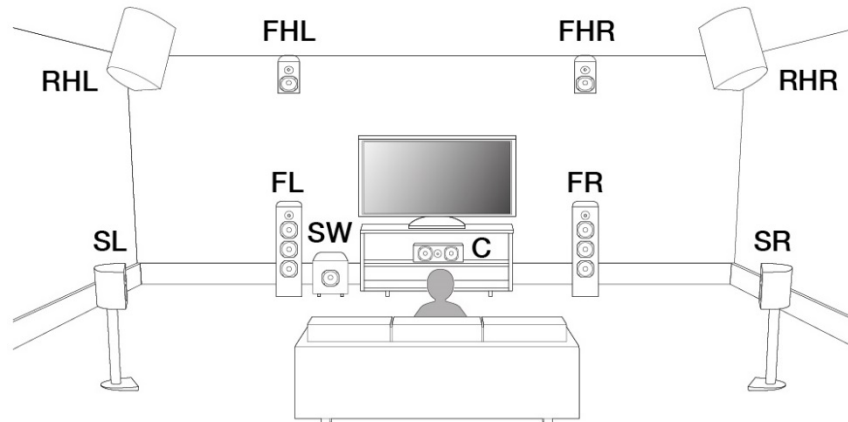




## DTS:X ACTUALIZACIÓN DEL FIRMWARE PARA ESTA UNIDAD

Esta unidad requiere una actualización del firmware para disfrutar del DTS:X.


### Cómo realizar la actualización

1. Cuando la actualización del firmware de DTS:X esté disponible, aparecerá la siguiente pantalla en su TV cuando encienda la unidad y establezca una conexión a Internet.

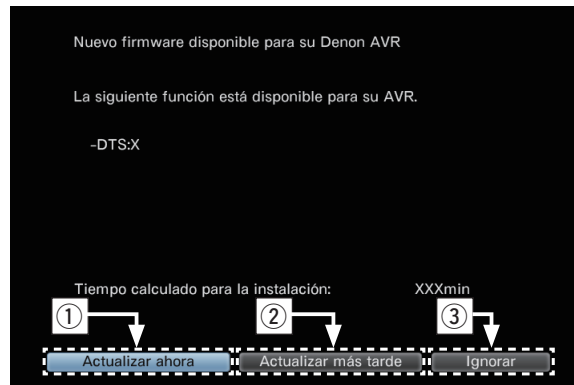

2. Seleccione una de las siguientes opciones que aparecerán en pantalla.

- ① Actualizar ahora  
Iniciar el proceso de actualización.
- ② Actualizar más tarde  
Aparecerá la siguiente pantalla.

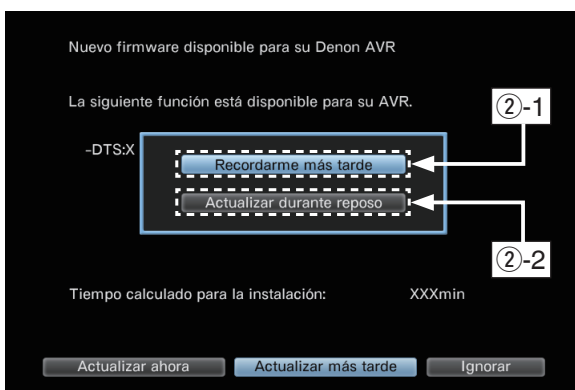

- ②-1. Recordarme más tarde  
Se le preguntará si desea actualizar la próxima vez que encienda la unidad.
- ②-2. Actualizar durante reposo  
El firmware de la unidad se actualizará la próxima vez que la apague.

- ③ Ignorar  
No actualizar el firmware de la unidad.



También puede actualizar el firmware de la unidad desde el menú de configuración.

1. Pulse el botón SETUP del mando a distancia.
2. Seleccione General → Firmware → Actualizar
3. Seleccione Actualizar.